



Absolutely State of the Art Mobile Audio



DSP.00R

Installation Guide & Users Manual

Index

1. PRODUCT DESCRIPTION & WARNINGS	3
2. CONTENTS	3
3. DIMENSIONS & MOUNTING 4	
 4. PRIMARY WIRE HARNESS & CONNECTIONS 4.1 Primary Wire Harness 4.2 Input Gain Control 4.3 RCA Auxiliary Input 4.4 SPDIF / Optical Input 4.5 Remote Control Connecition 4.6 USB Connection 4.7 RCA Outputs 	5-6 7 7 7 7 7 7
5. SOFTWARE INSTALLATION	8-10
 6. DSP-88R DSP COMPOSER 6.1 Channel Summing & Input Mode 6.2 Channel Setting 6.3 Crossover Configuration 6.4 Crossover Slope Configuration 6.5 Independent Channel Gain 6.6 Independent Channel Delay 6.7 Response Graph 6.8 Equalizer Adjustments 6.9 Saving, Opening, & Downloading Pre-Sets 	11 12 13 13 13 14 14 14 14
7. REMOTE CONTROL 7.1 Master Volume Control 7.2 Preset Selection 7.3 Input Selection	16 16 16
8. SPECIFICATIONS	17

1. PRODUCT DESCRIPTION & WARNINGS

DSP-88R is a digital signal processor essential to maximize the acoustic performance of your car audio system. It consists of a 32-bit DSP processor and 24-bit AD and DA converters. It can connect to any factory system, even in vehicles featuring an integrated audio processor, since, thanks to the de-equalization function, DSP-88R will send back a linear signal.

It features 7 signal inputs: 4 Hi-Level, 1 Aux Stereo, 1 Phone and provides 5 PRE OUT analog outputs. Each output channel has a 31-band equalizer available. It also features a 66-frequency electronic crossover as well as BUTTERWORTH or LINKWITZ filters with 6-24 dB slopes and a digital time delay line. The user can select adjustments that allow him or her to interact with DSP-88R through the remote control device.

WARNING: A PC provided with Windows XP, Windows Vista or Windows 7 operating system, 1.5 GHz minimum processor speed, 1 GB RAM minimum memory and a graphics card with a minimum resolution of 1024 x 600 pixels are required to install the software and setup the.

2- Before connecting DSP-88R, carefully read this manual. Improper connections may cause damage to the DSP-88R or to the speakers in the car audio system.



3. DIMENSIONS & MOUNTING



4. PRIMARY WIRE HARNESS & CONNECTIONS



4.1 Primary Wire Harness

HIGH LEVEL / SPEAKER LEVEL INPUTS

The primary wire harness includes appropriately color-coded 4-channel hi-level signal inputs to connect speaker level signal from the head unit. If the head unit low-level RCA outputs are equal or greater than 2V RMS, you can connect it to the high-level inputs. Use the input gain control to appropriately match the input sensitivity to the head unit output level.

POWER SUPPLY CONNECTIONS

Connect constant 12V+ power to the yellow 12V+ wire and ground to the black GND wire. Be sure the polarity is as indicated on the wire. A misconnection may result in damage to DSP-88R. After applying power, wait at least 10 seconds before turning on.

REMOTE IN / OUT CONNECTIONS

Connect the amplifier turn-on of the head unit or switched/ACC 12V power to the red REM IN wires. Connect the blue REM OUT wire to the remote turn-on terminal of the amplifier and/or other devices in the system. REM OUT features a 2 second delay to eliminate noise pops. *DSP-88R must be switched on before any amplifiers are turned on. The head units amplifier turn-on must be connected to REM IN, and REM OUT should be connected to the remote turn-on terminal of the amplifier(s) or other devices in the system.*

HANDS-FREE BLUETOOTH MODULE INPUT

The primary wire harness also features connections for a hands free Bluetooth module. Connect the audio +/- outputs of the hands-free Bluetooth module to the pink color PHONE +/- wires of the primary wire harness. Connect the mute trigger output of the hands-free Bluetooth module to the orange color PHONE MUTE - wire of the primary harness. The mute control is activated when the mute trigger receives ground. The PHONE MUTE terminal can also be used to enable the AUX input. In this case, the PHONE +/- inputs are inactive.

MUTE IN

The outputs of DSP-88R can be muted when starting the engine by connecting the brown MUTE IN wire to the ignition starter turn-on. The MUTE IN terminal can be used to enable the AUX IN input. In this case the output mute function, set by default, will be disabled.

4. PRIMARY WIRE HARNESS & CONNECTIONS (cont.)



4. PRIMARY WIRE HARNESS & CONNECTIONS (cont.)

4.2 Input Gain Control

Use the input gain control to appropriately match the input sensitivity to the head unit output level. High-level input sensitivity is adjustable from 2v-15V. AUX/low level input sensitivity is adjustable from 200mV-5V.

4.3 RCA Auxiliary Input

DSP-88R features an auxiliary stereo signal input to connect to an external source such as mp3 player or other audio sources. The AUX input can be selected by the remote control or activating the brown MUTE-IN wire.

4.4 SPDIF / Optical Input

Connect the optical output of the head unit or audio device to the SPDIF/Optical audio input. When the optical input is used, the high level inputs are bypassed.

4.5 Remote Control Connecition

Connect the remote control module to the remote control input, using the supplied network cable. See section 7 for use of the remote control.



4.6 USB Connection

Connect DSP-88R to a PC and manage its functions via the supplied USB cable. The connection standard is USB 1.1 / 2.0 compatible.

4.7 RCA Outputs

Connect the RCA outputs of DSP-88R to the corresponding amplifiers, as determined by the settings of the DSP software.

5. SOFTWARE INSTALLATION

Visit SOUNDSTREAM.COM to download the latest version of the DSP Composer software and USB drivers to your PC. Be sure to download USB drivers for your computers operating system, Windows 7/8 or XP:

	wer	My Wishlist My Cart Checkout Log
Absolutely State of the Art Mob	ile Audio »	Search entire store here
The second se	Home Products Team Catalogs	About Us Contact Support
Home / Products / Accessories / Signal Processors	/ DSP-88R	
		Compare Products
	DSP-88R	You have no items to compare.
	Email to a Friend	
DSP-68R	Email to a mend	My Cart
COP-LOS	Availability: In stock	My Cart You have no items in your
Provent and a second	Availability: In stock \$369.95	My Cart You have no items in your shopping cart.
and the second second	Availability: In stock \$369.95 Oty: 0 Add to Carl OR Add to Wishlist	My Cart You have no Items in your shopping cart.
Contraction of the second seco	Availability: In stock \$369.95 Qty: 0 Add to Cart OR Add to Wishlist Add to Compare	My Cart You have no Items in your shopping cart.
	Availability: In stock \$369.95 Qty: 0 Add to Cart OR Add to Wishlist Add to Compare	My Cart You have no items in your shopping cart.

After downloading, first install the USB drivers by launching SETUP.EXE in the USB folder. Click IN-STALL to complete installation of the USB drivers:

111 🔜 (日本)	Application To	als		R340-Wil	81		
File Home Share View	Manage						n
Copy Palle Paste shortcut	e Copy De to+	K I	New tolder	New Ren *	Propertie	Copen •	Select all Select none Invert selection Select
😑 () - 🛧 🏨 + R340-WIN8				~	C S	earch R340-Will	a, 84
Favorites	~	Name	*	Type		Size	Date modified
Desktop	_	DRV.	SETUP64	File folder			
Downloads		CH3	41PT.DLL	Application	extens	7 KB	
A Recent places		CH3	41564.SYS	System file		57 KB	
A SkyDrive		CH3	41598.SVS	System file		20 KB	
Dis Pis		2 ch34	ISER	Security Ca	talog	10 KB	
		CH3	41SER	Setup Infor	mation	6 KB	
Jibraries		CH3	41SER.SYS	System file		39 KB	
Documents.		CH3	41SER.VXD	Virtual devi	ce driver	20 KB	
Music.		💏 SETU	JP.	Application		82.KB	
E Pictures							
Videos Videos							
9 items 1 item selected 81.8 KB	*	<					12

4	DriverSetup(X64) – 🗆 🗙
Device Driver Ins	tall / Uninstall
Select INF File :	CH341SER.INF v
INSTALL	WCH.CN IUSB-SERIAL CH340
UNINSTALL	L11/04/2011, 3.3.2011.11
HELP	

After successful installation of the USB drivers, launch the DSP Composer setup application. Select your preferred language:

	Select Setup Language					
12	Select the language to use during the installati	on:				
	English	~				
	OK Cancel					

5. SOFTWARE INSTALLATION (cont.)

Close any open applications and click NEXT:



Review the license agreement & select I ACCEPT THE AGREEMENT, and click NEXT:

ļ	Setup - DSP-88R	-		×
I	License Agreement. Please read the following important information before continuing.		1	ß
	Please read the following License Agreement. You must accept the terms of this agreement before continuing with the installation.			
	R51600 License		^	
	Except where otherwise noted, all of the documentation and software included in the Blink Setup package is copyrighted by BrighTone.			
	Copyright (C) 1997-2010 BrighTone. All rights reserved. Portions Copyright (C) 2009-2010 BrighTone. All rights reserved.			
	This software is provided "as-is," without any express or implied warranty. In no event shall the author be held liable for any damages arising from the		÷	
	 I accept the agreement 			
	\bigcirc I do not accept the agreement			
	< Back Next >	(Cancel	

Choose an alternate location to save the program files, or click NEXT to confirm the default location:



5. SOFTWARE INSTALLATION (cont.)

Choose to install a short cut in the start menu or create a desktop and QuickLaunch icons, click NEXT:



Finally, click INSTALL to begin installation of the DSP Composer software. If prompted after installation completion, restart your computer:

6	Setup - DSP-88R	- 🗆 🗙	Ĩ	3	Setup - DSP-88R	- 🗆 ×
	Ready to Install Setup is now ready to begin installing DSP-88R on your computer.			Installing Please wa	ait while Setup installs DSP-88R on your computer.	
	Click Install to continue with the installation, or click Back if you want to review or change any settings.			Extracting C:\Progra	g files m Files (x86)\DSP-88R\DSP-88R.exe	
	Destination location: C:\Program Files (x86)\DSP-88R	^				
	Start Menu folder: DSP-88R	× >				
	< Back Install	Cancel				Cancel



6. DSP-88R DSP COMPOSER

Locate the DSP Composer icon



and launch the application:

Select DSP-88R if the PC is connected to DSP-88R via the supplied USB cable, otherwise select OF-FLINE-MODE.

In OFFLINE-MODE, you can create and/or modify new and pre-existing custom user presets. No modifications to the DSP will be saved until you reconnect to DSP-88R and download the custom user preset.

When creating a new setting, chose the EQ combi-

nation that is appropriate for your application:

Option 1 gives channels 1-6 (A-F) 31-bands of equalization (20-20kHz). Channels 7 & 8 (G & H) are given 11 bands of equalization (20-150Hz). This configuration is optimal for typical 2-way component or bi-ampable coaxial systems where active crossovers will be utilized.

Option 2 gives channels 1-4 (A-D) 31-bands of equalization (20-20kHz). Channels 5 & 6 (E & F) are given 11 bands of equalization, (65-16kHz). Channels 7 & 8 (G & H) are given 11 bands of equalization (20-150Hz). This configuration is ideal for advanced 3-way component applications using all active crossovers.

Other options include units of measurement for time delay adjustment, and READ FROM DEVICE.

Select MS for millisecond or CM for centimeter time delay.

Select READ FROM DEVICE for the DSP Composer to read the EQ combination settings currently uploaded to DSP-88R.



Precision Power

6. DSP-88R DSP COMPOSER (cont.)



6.1 Channel Summing & Input Mode

For input summing options, in the FILE menu, chose CD SOURCE SETUP. Select which channels are high-pass or low-pass by selecting TWEETER or MIDRANGE for the appropriate input channel, otherwise keep FULLRANGE. Chose the signal input mode you are creating this preset for. SPDIF for the optical input, CD for the primary wire harnesses high / speaker level input, AUX for the AUX RCA input, or PHONE for the hands-free Bluetooth module input.



6.2 Channel Setting

Select the channel 1-8 (A-H) to modify. If you chose option 1 from the EQ combination menu, equalization adjustments for the left channels (1, 3, & 5 / A, C & E) are matched. Crossover settings remain independent. Likewise, equalization for the right channels (2, 4, & 6 / B, D, & F) are matched. Crossover settings remain independent. This configuration is optimal for typical 2-way component or bi-ampable coaxial systems where active crossovers will be utilized. Channels 7 & 8 (G & H) are independently variable equalization and crossover settings. If you chose option 2 from the EQ combination menu, equalization adjustments for the left channels (1



& 3 / A & C) are matched, as right channels (2 & 4 / B & D). Crossover settings remain independent. Channels 5 & 6 (E & F) are independently variable for equalization and crossover settings, as are channels 7 & 8 (G & H) for subwoofers. This configuration is ideal for advanced 3-way component applications using all active crossovers.

Use A>B COPY to duplicate the equalization settings of the left channels, (1, 3, & 5 / A, C, & E) for the right channels, (2, 4, & 6 / B, D, & F). The right channels can be modified further after an A>B COPY without effect to the left channels.



6. DSP-88R DSP COMPOSER (cont.)

6.3 Crossover Configuration

The crossover configuration is independent for each channel, regardless of the EQ configuration chosen. Each channel could use a dedicated high-pass (HP), dedicated low-pass (LP), or band-pass option (BP), enabling both highpass and low-pass crossovers simultaneously. Position each crossover slider to the desired frequency, or manually type the frequency in the box above each slider. Regardless of the crossover configuration or EQ combination, the frequency is infinitely variable from 20-20kHz.

CROS	SOV IP	ER TY BP	(PE LP
CRO	sso	VER	FC
700	Hz	300	
			-
LP		HP	

6.4 Crossover Slope Configuration

Each crossover setting can be given its own dB per octave setting, from as little as 6dB to as much as 48dB. These flexible crossovers allows for precise cut-off frequency setting, ensuring optimal protection and performance of your speakers.



6.5 Independent Channel Gain

Each channel is give -40dB gain, and a master gain for all channels simultaneously of -40dB up to +12dB. The gain is set by .5dB increments. Position each channel slider to the desired gain level, or manually type the level in the box above each slider. Channel gain is available regardless of EQ combination. Each channel also has an independent mute switch.



6. DSP-88R DSP COMPOSER (cont.)

6.6 Independent Channel Delay

A specific digital time delay can be applied to each channel. Depending on your choice at the EQ combination menu, the unit of measure is milliseconds or centimeters. If you chose millimeters, the delay is set in .05ms increments. If you chose centimeters, the delay is set in 2cm increments. Position each channel slider to the desired delay level, or manually type the level in the box above each slider. Also, each channel has a 180° phase switch below each slider.



6.7 Response Graph

The response graph shows the response for each channel with the modifications given to it, including crossover and all bands of equalization, with reference to 0dB. The crossover frequencies can be manually adjusted by clicking the blue position for low-pass, or red position for high-pass and dragging to the desired location. The graph will show each channels projected response when the channel is selected from the channel setting.



6.8 Equalizer Adjustments

Available frequency bands for the selected channel will appear. If option 1 was chosen for the EQ combination, channels 1-6 (A-F) will have 31 1/3 octave bands, 20-20kHz. Channels 7 & 8 will have 11-bands, 20-200 Hz. If option 2 was chosen, channels 1-4 (A-D) will have 31 1/3 octave bands, 20-20kHz. Channels 5 & 6 (E & F) will have 11-bands, 63-16kHz. Channels 7 & 8 (G & H) will have 11 bands, 20-200Hz.



6. DSP-88R DSP COMPOSER (cont.)

6.9 Saving, Opening, & Downloading Pre-Sets

While using DSP-88R DSP Composer in off-line mode, you can create a new preset or open, view and modify an existing preset. If making a new preset, be sure to save the preset for recalling and downloading to DSP-88R the next time your computer is connected. Click FILE from the menu bar, and chose SAVE. Chose a convenient location to save your preset.





To download a preset to DSP-88R, either after making your preset or opening a previously created preset, select FILE from the menu bar, then DOWNLOAD TO DEVICE.

After choosing a location to save your preset again, select an available preset position to download to DSP-88R. Click SAVE TO FLASH. Now your preset(s) are ready to be recalled by the remote control.

		Dialog		?	×
Status:					
1.Saved	2.Empty	3.Empty	4.Empty	5.Empty	
6.Empty	7.Empty	8.Empty	9.Empty	10.Empty	
-Setup:					
Select Sa	ve Place	•	Save	to Flash	
Select Sa	ve Place	· [
Pos 1 Pos 2					
Pos 3					
Pos 4					
Pos 5					
Pos 7					
Pos 8					
Pos 9					





7. REMOTE CONTROL

Connect the remote control to the remote control input of DSP-88R by the supplied network cable. Mount the remote control in a convenient location in the main cabin of the vehicle for easy access using the supplied mounting hardware.



7.1 Master Volume Control

The master volume knob can be used as an auxiliary volume control, the maximum is 40. A quick press of the button will mute all output. Depress the button again to cancel mute.

7.2 Preset Selection

Press the up or down arrow buttons to scroll thru your saved presets. After locating the preset you wish to activate, press the OK button.

7.3 Input Selection

Press the INPUT buttons to activate the different inputs from your various audio devices.

8. SPECIFICATIONS

Power Supply

Voltage Idle Current Switched Off without DRC Switched Off with DRC Remote IN Voltage Remote OUT Voltage

Signal Stage

Distortion - THD @ 1kHz, 1V RMS Output Bandwidth @ -3 dB S/N ratio @ A weighted Master Input Aux Input Channel Separation @ 1 kHz Input Sensitivity (Speaker In) Input Sensitivity (Aux In) Input Sensitivity (Phone) Input Impedance (Speaker In) Input Impedance (Aux) Input Impedance (Phone) Max Output Level (RMS) @ 0.1% THD

11-15 VDC 0.4 A 2.5 mA 4 mA 7-15 VDC (1.3 mA) 12 VDC (130 mA)

0.005 % 10-22k Hz

95 dBA 96 dBA 88 dB 2-15V RMS 200mV-5V RMS 2-15V RMS 2.2kΩ 15kΩ 2.2kΩ 4V RMS