


OPERATOR'S MANUAL

**2025 AM • 2050 AM
2075 AM • & • 2150 AM**

Adaptive MOSFET Two-Channel Amplifiers

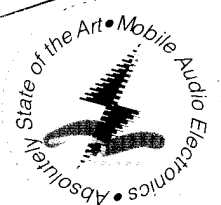

PrecisionPower

Amplifiers, Signal Processors and Accessories

MADE IN THE U.S.A.

MADE IN THE U.S.A.

TABLE OF CONTENTS

FEATURES	2
GLOSSARY	3
SPECIFICATIONS	4
INTRODUCTION	5
INSTALLATIONS	6
CONTROLS	9
MOUNTING	10
SYSTEM TUNING	11
SAMPLE HOOKUP CONFIGURATIONS	13
TROUBLESHOOTING	14
LIMITED WARRANTY	16

CONGRATULATIONS

Congratulations! You have taken advantage of our new Precision Power High Performance Mobile Audio Equipment. In your selection of our two channel amplifier, you will notice its unique capabilities, high-tech design, and use of "tomorrow's" technology today.

Precision Power is a proven world leader in mobile audio electronics. Specializing in the design, engineering, and manufacturing of our state-of-the-art amplifiers, crossovers, equalizers, and accessories. These products will help to further enhance your personal sound system.

To achieve optimum satisfaction and highest quality performance from your new amplifier, please read this manual thoroughly before installation. Keep the manual in a safe place and refer to it as you continue to refine your system. If you encounter difficulties during or after installation and are unable to resolve the problem, please contact your PPI dealer or call Precision Power during business hours (8am to 5pm MST) at 1-800-62-POWER for further assistance.

CAUTION The use of a high-powered stereo system may cause hearing loss or damage. While Precision Power systems are capable of "concert level" volumes with incredible accuracy, they are designed for you to enjoy the subtleties created by musicians for listening at reasonable sound pressure levels. The use of a high power stereo system may impair your ability to hear traffic sounds, thus may constitute a traffic hazard. PPI advises lower volume levels while driving.

FEATURES

- * Ultra-Wide Bandwidth Circuitry
- * Bridging Capabilities
- * Gold RCA Input Connectors
- * Linear Pulse Regulated Power Supplies
- * Phantom Power
- * Output Short Circuit Protection
- * Low Impedance Indicator
- * Soft Start
- * Adjustable Input Sensitivity
- * Two Year Warranty
- * Manufactured in the USA

GLOSSARY

The following terms are used within this manual. Since they may be unfamiliar, definitions are provided as follows.

Bridging	Combining two amplifier channels into one channel.
Gain	The ratio of output voltage to input voltage. The gain control allows adjustment to the amplifier's output level for varying input levels.
LED	Light Emitting Diode. Usually indicates power on/off and/or signal overload.
Load Impedance	Measurement of speaker(s) resistance/reactance that the amplifier must drive.
Phantom Power	Power supplied to PPI accessories through a Precision Power amplifier via the DIN cables.
Remote Turn-On	Low current automatic switching circuit which is connected to a power antenna lead and to the amplifier(s) via the blue wire on the speaker harness.


SPECIFICATIONS

	2025AM	2050AM	2075AM	2150AM
Continuous Power Output (Watts per channel into 4 Ohms @ 12V, Stereo)	25 W	50 W	75 W	150 W
(Watts into 4 Ohms) @ 12V, Bridged)	100W	200 W	300 W	600 W
(Watts per channel into 2 Ohms @ 12V, Stereo)	50 W	100 W	150 W	300 W
Dimensions (H x W x D)	2.1" x 8" x 6.1"	2.1" x 8" x 8.5"	2.1" x 8" x 10.1"	2.1" x 8" x 12.1"
Shipping Weight	7.5 lbs.	7.5 lbs.	8 lbs.	10 lbs.
Fuse	15 A	25 A	25 A	35 A
Common Specifications				
Power Bandwidth (±1 dB)	10 Hz - 50K Hz			
Total Harmonic Distortion (Per IHF A-202)	0.02%			
Signal-to-Noise Ratio (A-weighted)	102 dB			
Damping Factor (100 Hz)	> 500			
Stereo Separation	>72 dB			
Input Sensitivity	0.30 - 2.0V			
Input Impedance	10K Ohms			
Output Impedance (Stereo)	2 - 8 Ohms			
Output Impedance (Bridged)	4 - 8 Ohms			
Supply Voltage	10.5 - 16 VDC			

INTRODUCTION

Precision Power's two channel amplifiers, 2025AM, 2050AM, 2075AM, and 2150AM, are efficient in the distribution of current throughout each channel. By utilizing the available features the sound quality and reliability are unmatched. These amplifiers feature an ADAPTIVE MOSFET switching power supply, over-current protection, and internal bridging capabilities. The adaptive circuit operates when the amplifier senses an impedance load of less than 2 Ohms. The power supply's operational parameters are modified to retain optimum performance. A low impedance indicator is provided to let you know when the amplifier(s) is operating in this mode. If a load of less than 1.5 Ohms is sensed by the amplifier, the over-current protection responds and the amplifier is temporarily shut down until the problem is resolved. The internal bridging capabilities allows versatility in hosting several different speaker configurations. For further information in this area refer to the Sample Hookup Configurations in this manual.

FIG. A POWER WIRING

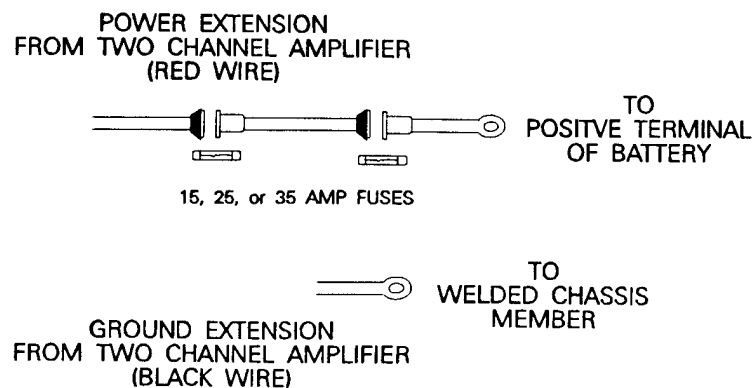

INSTALLATIONS

POWER

Disconnect the negative post of the battery before working on the positive terminal to prevent a short to ground. Reconnect the negative terminal only after all connections have been made.

The 2025AM, 2050AM, 2075AM, and 2150AM are powered from the vehicle's 12-volt battery or any standard 12-volt DC supply, and a remote switching +12 volt source for turn-on. These connections are color coded as follows:

+12 Volts ----- Red Wire
Chassis Ground ----- Black Wire
Remote Turn-On ----- Blue Wire

These amplifiers are shipped with a 12 guage (10 guage for the 2150AM) red, primary power harness which includes two inline fuse holders. One is mounted near the amplifier and the other near the positive terminal of the battery. (Refer to Fig. A) These offer protection from a short to the chassis and additional protection to the amplifier's internal circuitry. The power harness is terminated with a large ring for connection directly to the positive terminal of the battery. After this connection is made insert the fuse to the amplifier and the long power wire (15 Amp provided for the 2025AM, 25 Amp provided for the 2050AM and 2075AM, and 35 Amp provided for the 2150AM). Route this wire, avoiding sharp corners, creases, and sharp car body parts to the battery fuse holder. Cut off excess wire and slip on the black fuse cap (provided). Using wire strippers (not provided), strip the power wire 1/8 inch. Insert the stripped wire into the silver rivet cap (provided) and solder thoroughly. After the solder cools, clean the remaining flux from the rivet cap and insert the fuse that was provided with your amplifier (15 Amp for the 2025AM, 25 Amp for the 2050AM and 2075AM, and 35 Amp for the 2150AM).

The amplifier(s) now need to be grounded with the 12 guage black wire (10 guage for the 2150AM) that extends from the amplifier's chassis. This wire is also terminated with a ring for easy connection. The ground wire should be connected to a welded chassis member. When connecting, use a #8 sheet metal screw (not provided), being sure to remove any paint from the surrounding metal. **DO NOT** lengthen the ground wire. Failure to adhere to this procedure may result in system noise.

INSTALLATIONS

REMOTE TURN-ON

In order for the amplifier(s) to turn on, the Remote Turn-On wire (blue wire located on the speaker harness) must be connected to the power antenna lead. (Refer to Fig. B) If this lead is unavailable a separate switch must be used. This switch will need to be connected to the +12-volts of the battery. This will allow your amplifier(s) to shut on and off with the car.

If the 2025AM, 2050AM, 2075AM, or 2150AM does not power up, contact your dealer or Precision Power at 1-800-62-POWER for assistance.


SPEAKER WIRING

All speaker connections are provided with a harness. (Refer to Fig. B) The harness connection is located on the right side panel of the two channel amplifier. (Refer to Fig. C) If extra wire is needed, always use 16 guage or larger wire. **NEVER CONNECT ANY SPEAKER LEAD TO THE CAR CHASSIS OR TO ANOTHER LEAD.**

For optimum performance, speaker impedances should be 4 Ohms or greater, either bridged or stereo. The Sample Hookup Configurations will help to show how this may be accomplished.


INSTALLATIONS

FIG. B SPEAKER HARNESS

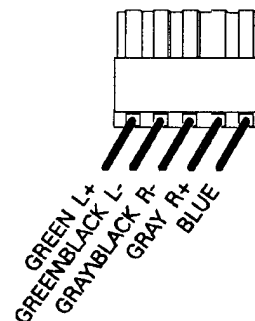

The Remote Turn-On Wire (blue) is connected to the power antenna lead or a +12-volt switch.

FIG. C RIGHT SIDE PANEL OF PPI TWO CHANNEL AMPLIFIER

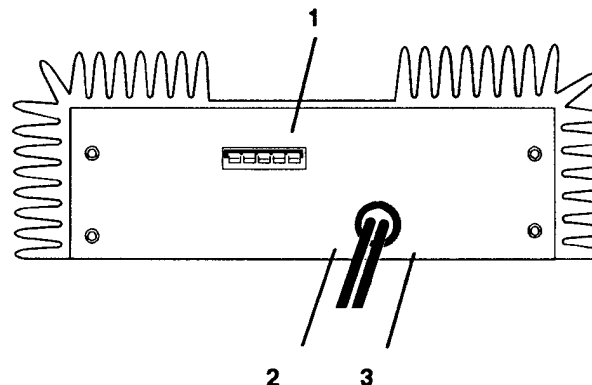

1. Speaker Output
2. Red Power Wire (+12-Volts)
3. Black Ground Wire (Chassis Ground)

INSTALLATIONS

INPUTS

On the left side panel of the Precision Power two channel amplifiers (Refer to Fig. D) is a set of RCA-jacks, left and right. A DIN-jack is paralleled to the inputs utilizing PPI's flexibility and convenience. This DIN-jack can be used to Phantom power other PPI accessories, such as our crossovers and equalizers.

CONTROLS


GAIN

The gain controls are located on the left side panel of Precision Power two channel amplifiers. (Refer to Fig. D) These controls require a small flat blade screwdriver to be adjusted. The gain determines the output signal level the amplifier produces. Too much gain can overload the speakers and produce distortion.

LOW IMPEDANCE INDICATOR

This LED, located on the left side panel of Precision Power two channel amplifiers (Refer to Fig. D), is used to indicate when the amplifier is operating with less than a 2 Ohm Load. If the LED stays lit shut the amplifier off and check the impedance load to ensure it is not less than 2 Ohms. Occasional flashing is acceptable. The amplifier will shut down at 1.5 Ohms for it's protection. If any problems arise call your dealer or Precision Power for assistance.

FIG. D LEFT SIDE PANEL OF PPI TWO CHANNEL AMPLIFIER

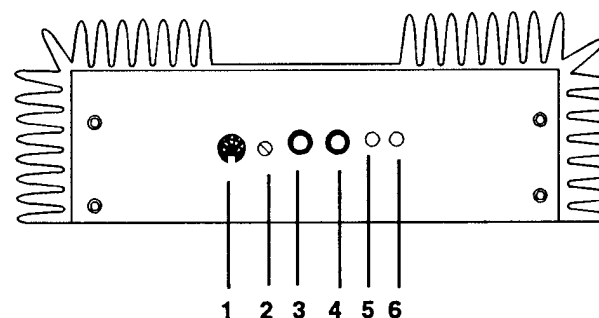

- | | |
|--------------------|----------------------------|
| 1. DIN-Jack Input | 4. Right RCA Input |
| 2. Gain Adjustment | 5. Low Impedance Indicator |
| 3. Left RCA Input | 6. Power Indicator |

TOOLS NEEDED FOR INSTALLATION

- | | |
|--------------------------------|----------------------------------|
| * Small Flat Blade Screwdriver | * Phillips Screwdriver |
| * Wire Cutters | * Wire Strippers |
| * Soldering Iron | * Solder** |
| * Flux Cleaner** | * 4 Washers and Screws per amp** |
| * #8 Metal Screw per amp | |

** we suggest: water soluble solder, water to clean flux, and #6 Metal Screws for securing amp.

MOUNTING

To prevent damage to the amplifier while driving, mount it in a secure place. It may be mounted in any compatible space that is convenient to your needs. Keep in mind, the demanding life of an amplifier causes an increase in temperature the longer and harder it is working. Therefore, place the amplifier where there is sufficient air ventilation. Secure with #6 metal screws (not provided).

SYSTEM TUNING

In order to achieve maximum signal-to-noise performance from a high quality auto stereo system, it is desirable to use high signal levels wherever possible in the interconnection cables. High signal levels will reduce the effect of induced noise. The peak level of an audio signal is usually determined by the clipping level of electronic components. The following procedure should be used as a guide when the system installation is complete.

Adjusting equalizer input gains:

1. Turn the equalizer's volume control to minimum.
2. Turn source unit volume 1/2 to 3/4 of maximum. If available on your unit, set the output level to maximum. Some units may have a switch.
3. If available, set selector switch to either input 1 or input 2.
4. Adjust all equalizer input gains to minimum.
5. For the chosen input play the respective music source, such as a cassette, CD, or FM station. A loud music selection is desired.
6. For the chosen input, increase the left input gain control until the onset of audible distortion. Then decrease the gain prior to the immediate point of audible distortion. This setting will minimize system background noise and prevents overloading of the equalizer. Adjust, for the same input, the right input gain control for proper left/right balance.
7. Set selector switch to the alternate source unit, if used, and repeat steps 5 and 6.
8. Adjust crossover next.

SYSTEM TUNING

Adjusting crossover input gains:

1. Adjust all crossover's gain control(s) to 0dB, 1/2 of maximum sensitivity.
2. Adjust all amplifier gains to 1/2 of maximum sensitivity.
3. Turn the volume knob on the equalizer to a maximum of 3 o'clock.
4. Increase the gain of the crossover until the onset of audible distortion. Then decrease the gain prior to the immediate point of audible distortion. This setting will minimize system background noise and prevents overloading of the crossover.
5. Repeat step 4 for any remaining crossovers in the system.
6. Adjust the 2025AM, 2050AM, 2075AM, or 2150AM input gains next.





NOTE: In many multi-crossover/accessory systems, the gain of some crossovers/accessories may need to be further decreased to achieve proportional balance.

Adjusting 2025AM, 2050AM, 2075AM, or 2150AM input gains:

1. Adjust all amplifier gains clockwise to 1/2 of maximum sensitivity.
2. Turn the volume knob on the equalizer to a maximum of 3 o'clock.
3. Increase the gains clockwise of the two channel amp(s) until the onset of audible distortion. Then decrease the gains counterclockwise prior to the immediate point of audible distortion. This setting will minimize system background noise and prevents overloading the 2025AM, 2050AM, 2075AM, or 2150AM.
4. Repeat step 3 for any remaining amplifiers in the system.

NOTE: Depending on the sensitivity of the system's preamp(s), the gain of the amplifier(s) may not need adjustments. Also, in many multi-amplifier systems, the gain of some amplifiers may need to be further decreased to achieve proportional balance.

SAMPLE HOOKUP CONFIGURATIONS

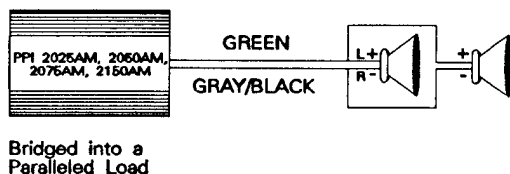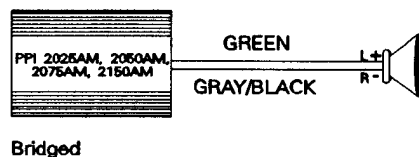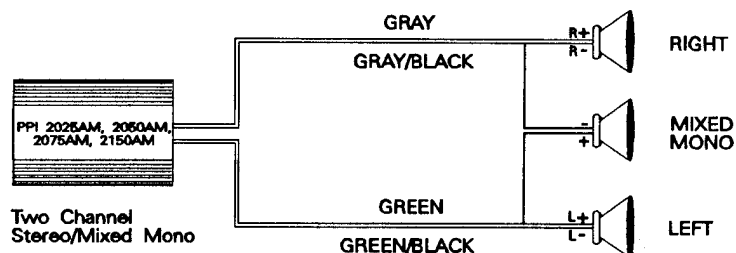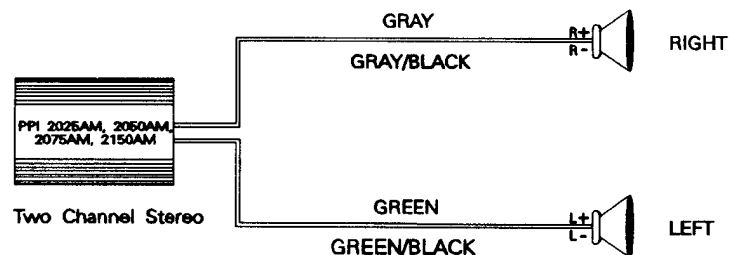

NOTE: When utilizing the Mixed Mono format, impedance loading is extremely important and an appropriate passive crossover network is recommended. Consult your PPI dealer or Precision Power at 1-800-62-POWER. For optimum performance, speaker impedances should be 4 Ohms or greater, either bridged or stereo.

TROUBLESHOOTING

If for some reason your system fails to operate properly, please refer to this guide. If you are unable to resolve the problem, consult your dealer or call Precision Power at 1-800-62-POWER for further assistance.

NO SOUND

Is the power LED illuminated? Check fuses in power wire. Be sure Turn-On lead is connected. Check signal leads. Check gain control. Check source unit's volume level. Clean contacts on fuse holder.

NO SOUND IN ONE CHANNEL

Check Speaker Leads. Inspect for short circuit or open connection.

Check Audio Leads. Reverse Left and Right cables to determine if it is occurring before the amp.

Check Mono Bridge and Bi Amp Crossover Switches on other devices prior to the amplifier. Depress switches to ensure proper position with respect to the installation.

If problem is with amplifier... Have your dealer inspect the unit.

AMP TURNING OFF AT LOW VOLUME LEVELS

Check speakers for damage or short. Have your dealer inspect the unit.

AMP TURNING OFF AT MEDIUM OR HIGH VOLUME LEVELS

Check speaker load impedance. Be sure proper speaker load impedance recommendations are observed. If you use an ohmmeter to check speaker resistance, please remember that DC resistance and AC impedance may not be the same. However, DC resistance is a good reference for lowest impedance potential.

THANK YOU

Thank you again for choosing Precision Power's two channel amplifier (2025AM, 2050AM, 2075AM, or 2150AM) to enhance your system. Your complete satisfaction is important to us. If you have any comments please feel free to write us.

To update your system with our state-of-the-art equipment we invite you to try our other products. Please consult your PPI dealer for further information.

Precision Power is the competitive edge

LIMITED WARRANTY

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Precision Power, Inc. (PPI) warrants its amplifiers and accessories to be free from defects in materials and workmanship under normal use and service for a period of two years from the date of original purchase. The extent and conditions of PPI's Limited Warranty are as follows:

1. PPI warrants that it will either repair or replace at no charge any unit which PPI's examination discloses to be defective and under warranty, provided the defect occurs within two years from the date of purchase, and the product is returned immediately to PPI.
2. The date of purchase of a PPI Amplifier and/or Accessory must be established by an original sales receipt which must accompany the article being returned for warranty work.
3. The provisions of this warranty shall not apply to any PPI unit used for a purpose for which it is not designed, which has been repaired or altered in any way, or which has been connected, installed, or adjusted other than in accordance with the instructions furnished in PPI's owner's manual. Nor shall this warranty apply to any part which has been subject to misuse, neglect, or accident.
4. PPI does not authorize any other person to assume any other liability in connection with its products. THIS WARRANTY IS THE ONLY EXPRESS WARRANTY MADE BY PPI APPLICABLE TO ITS PRODUCTS. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE APPLICABLE TO PPI'S AMPLIFIERS AND/OR ACCESSORIES IS LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY. PPI SHALL NOT BE LIABLE FOR THE INCIDENTAL, CONSEQUENTIAL, OR COMMERCIAL DAMAGES RESULTING FROM THE BREACH OF THIS WRITTEN WARRANTY. Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so the above limitations or exclusions may not apply to you.
5. Your unit will be serviced on an in-warranty basis within the warranty period for the correction of warranted defects. Do not return the article to your dealer. Return the article including your name, telephone number, and return address with the description of the problem to:

Precision Power
Warranty Department
4829 S. 38th Street
Phoenix, AZ 85040

TO RETURN ARTICLES OUT OF WARRANTY. Return the article, postage prepaid, in the original protective carton. Include in the package a description of the problem and, if desired, a request for an estimate of repair costs. Unless a request for an estimate is included, the unit will be repaired as necessary. Fifty dollars (\$50.00) labor, plus parts will be charged for all product repairs. The repaired unit will be returned to the customer with an itemized statement, C.O.D.